



Error codes GYTR ECU 2015-17

Christian Unger

YART GmbH

workshop@yart7.com

CODE	DESCRIPTION
8	Gear position sensor malfunctions
8	Gear position sensor malfunctions
11	Cam angle sensor malfunctions
12	Cylinder angle sensor malfunction
13	Intake pressure sensor malfunctions (open circuit / short circuit)
15	Throttle opening sensor malfunctions (open circuit / short circuit / ETV)
20	Intake pressure sensor or atmospheric pressure sensor malfunctions
21	Water temperature sensor malfunctions (open circuit / short circuit)
22	Intake temperature sensor malfunctions (open circuit / short circuit)
23	Atmospheric pressure sensor malfunctions (open circuit / short circuit)
33	Ignition coil #1 malfunctions (open circuit)
34	Ignition coil #2 malfunctions (open circuit)
35	Ignition coil #3 malfunctions (open circuit)
36	Ignition coil #4 malfunctions (open circuit)
39	Injector (primary) malfunctions (open circuit)
42	Rear wheel sensor malfunctions
43	Battery voltage monitor malfunctions (power source for fuel system)
44	EEPROM malfunctions
45	ECU malfunctions (electrical power system)
46	Power source for vehicle malfunctions
50	ECU internal malfunctions
59	Accelerator opening sensor malfunctions (open circuit / short circuit)
60	Throttle motor malfunctions (drive system)
69	Front wheel sensor malfunctions
70	Engine stop by idling away
98	IMU malfunctions (main unit)
99	IMU malfunctions (communication system)